



EDGE®2 UPDATE FEATURES

	FEATURES	EDGE 2	EDGE
1	Screen	 Capacitive screen functions like a smart phone. Swipe or slide from one screen to the other. Reacts more quickly to touch. 	Resistive screen that needs to be pressed to operate.
2	Icons/Navigation	 Main menu lists an overview of all rooms. Select a room to gain access to the setting and operation page of that room. Configuration Menu: Left to right. 	Static icons in upper left corner of display.Configuration Menu: Top to bottom
3	In Room/Tile Adjustment	Expandable tiles to see more details.Fan and inlet status in one ventilation tile screen.	NOT AVAILABLE
4	In Room/Ventilation Tile/Stages	CFM for each stage displayed in the grid and under the ventilation tile.	NOT AVAILABLE
5	In Room/Tile Repositioning	Customizable room views	NOT AVAILABLE
6	Room/Shortcut Key	 Faster navigation from tile to tile (fewer clicks) 	NOT AVAILABLE
7	Room / Shortcut key can be moved around	Shortcut Key can be re-ordered, On the App only 3-4 shortcut are visible, can be personalized	NOT AVAILABLE
8	Light Program	 3-day light schedule history. Light program option shortcut key.	NOT AVAILABLE
9	Alarms, Events & Issues	Customizable navigation sorting. (Alarms/Events/Issues)Alarm acknowledge button.	All in same page.
10	Ventilation Grid	 Reordering of fan and inlet tiles. (One dot if fan is full ON.) 	 Fans/Inlets are displayed in the order they were created. (Two dots if fan is full ON)
11	Ventilation Grid	• Fan stage started any day of the week	NOT AVAILABLE
12	Scheduling/Wizard	 Schedule started any day of the week. Wizard setup for faster repeatable scheduling. (Example: A purge schedule in which every 30 minutes air is purged for 2 minutes.) 	NOT AVAILABLE
13	Programmable Timer	Can be programmed down to the second.	Can be programmed to the minute only.
14	Outside Room Tile	Weather station and Bulk Feed Tank information found under the tile.	NOT AVAILABLE
15	Custom Units	Temperature: C/FWeight: Gram/PoundsWater: L/G	NOT AVAILABLE





EDGE®2 UPDATE FEATURES

CONTINUED...

	FEATURES	EDGE 2	EDGE
16	Programs	Up to 8 programs can be set.Programs can be switched manually or by animal age in version 4.2	NOT AVAILABLE
17	Natural Ventilation/ Wind Compensation	Wind compensation on individual panels with 4 steps of compensation.	• Limited wind compensation in one direction for all panels.
18	Natural Ventilation/Purge with wind compensation	Purge with wind compensation is available in 4 steps depending on wind speed	NOT AVAILABLE
19	Heaters/Brooder/Natural Curtain Interlocking	 Heaters can be forced off during purge cycles. Natural curtains can be forced to close or set for minimum for minimum opening during heating cycles. 	NOT AVAILABLE
20	Maximum Ventilation	 Version 4.2 - Set a maximum power stage and a maximum tunnel stage to block the ventilation under minimum animal age. (one for power, one for tunnel) 	NOT AVAILABLE
20	Room tile can be re-organize	Allow to customize each room view	NOT AVAILABLE
21	CO2 sensor and min vent compensation	• In software 4.4.5, CO2 is now part of the equipment list and minimum ventilation compensation is available	CO2 sensor can configure as a generic input but no compensation
22	Daily report	Base on production cycle	• Record every day









EDGE®2 supports all major languages and is UL/CSA certified and CE approved.

Contact your Cumberland or AP representative or visit our website for more information.



